AccessPad

Accessory for Sera4 Lock Controllers



AccessPad

The AccessPad is an accessory that extends the features of a Sera4 lock controller to monitor the status of the controller, enter a Fail-Safe Unlock access code without a mobile device, or to connect a 9V battery for emergency backup power.



Button Modes

- Awake/Status: Press once
- Fail-Safe Unlock: Press and hold for 3 seconds

LED in Controller Status Mode

- Locked (Slow heartbeat)
- Unlocked (Fast heartbeat)
- Bluetooth Connected (Solid)

1. Prepare Installation

- **1.A** Disconnect the power inputs from the controller.
- **1.B** Identify a flat surface where the AccessPad will be installed
- **1.C** Verify that the cables from the controller are long enough to reach the AccessPad.

If you need to extend these cables, we recommend using a 22AWG-10/30 stranded wire. Maximum distance is 10 meters.

To splice the wires we also recommend using a heat shrink and soldering iron as shown in this tutorial: https://learn.sparkfun.com/tutorials/working-with-wire/how-to-splice-wires

2. Connectors and Wires

Connection between the controller and the AccessPad is facilitated by a 300mm (12") cable that must be matched to the type of Sera4 controller at time of ordering.


For reference:

- the female connector (DF11-6DS-2C by Hirose Electric Co) mates with the 6-pin connector on the rear of the AccessPad.



3. Mount AccessPad

- **3.A** Print and use the template in the next page to drill the three mounting holes on the surface where the AccessPad will be installed.
- **3.B** Pass the cables coming form the AccessPad, through the 12mm hole.
- **3.C** Use the supplied screws (M6 x 1.0) to secure the AccessPad to the surface, with the two 7mm holes. **DO NOT OVERTIGHTEN.**

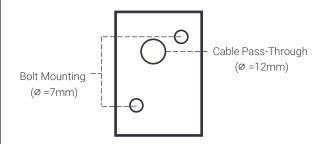

See attachment for a printable version of drilling points

4. Connect AccessPad





AccessPad

Connect the 6-pin female connector to the 6-pin male connector on the AccessPad (J1) $\,$


X-Series Controller

Connect the yellow cable (9V PP3) connector to the X-Series' yellow cable and the X-Series' brown cable (JST-SM) connector to the AccessPad's brown cable.

SLC2 Controller

The cable for SLC2 controller is a 5-pin connector. Insert this directly into the bottom port of the SLC2.



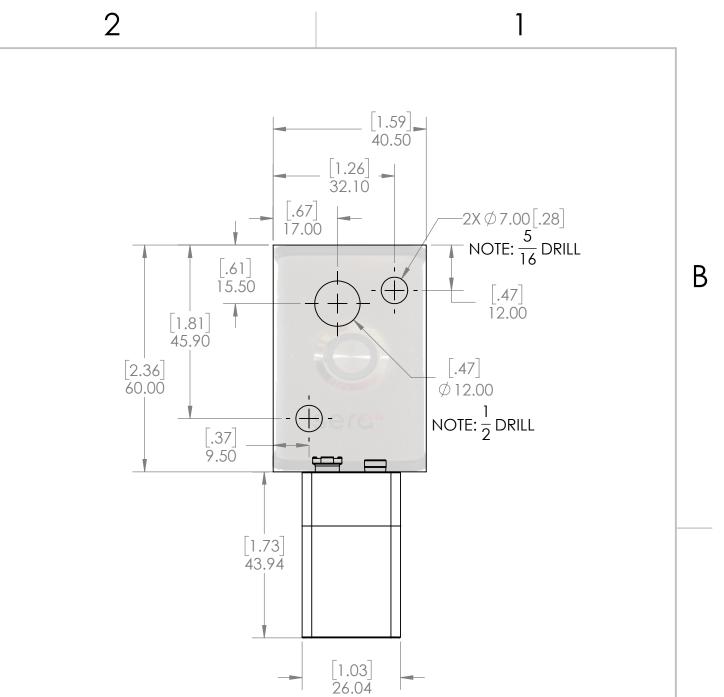

UNLESS OTHERWISE SPECIFIED: NAME DATE SERA4 DRAWN 15 Jun 2021 John DIMENSIONS ARE IN MILIMETERS [INCHES] CHECKED Konrad ACCESS PAD DRILL TEMPLATE ENG APPR. PROPRIETARY AND CONFIDENTIAL MFG APPR. THE INFORMATION CONTAINED IN Q.A. THIS DRAWING IS THE SOLE
PROPERTY OF <COMPANY NAME >.
ANY REPRODUCTION IN PART OR AS COMMENTS: SIZE DWG. NO. REV. A WHOLE WITHOUT THE WRITTEN PERMISSION OF < COMPANY NAME> IS PROHIBITED. DO NOT SCALE DRAWING SCALE:1:1 SHEET 1 OF 1 WEIGHT: