

AP3 USE IN WINTER CONDITIONS

Please follow these recommendations to safely operate your AP3 keyless padlock in winter conditions.



DO



Use your hands to crack/remove snow and ice from the top of the lock

Use the Unlatch feature to release the shackle



Move the shackle up and down to ensure free movement

Use a Sera4 protection sleeve - designed for Canadian winters (Order Sera4 Part Number AP3-WG)



DO NOT



Use a flame (lighter, torch) to melt snow or ice



Hit the AP3 with a hammer or tool



TROUBLESHOOTING



Connect a USB cable and charger (or computer) to assist opening below -20°C/4°F



Use lock de-icer to assist with frozen locks